



# Maxiglide PA12 Quick End Connectors: assembly instructions



## 1. Tools and Components needed

Maxiglide With PA12 Corrugated outer hose

Shissors for electrical tape

Screw drivers with flat tip




## Maxiglide PA12 Quick End Connectors: assembly instructions



**Remove the C shaped locking ring**



## Maxiglide PA12 Quick End Connectors: assembly instructions

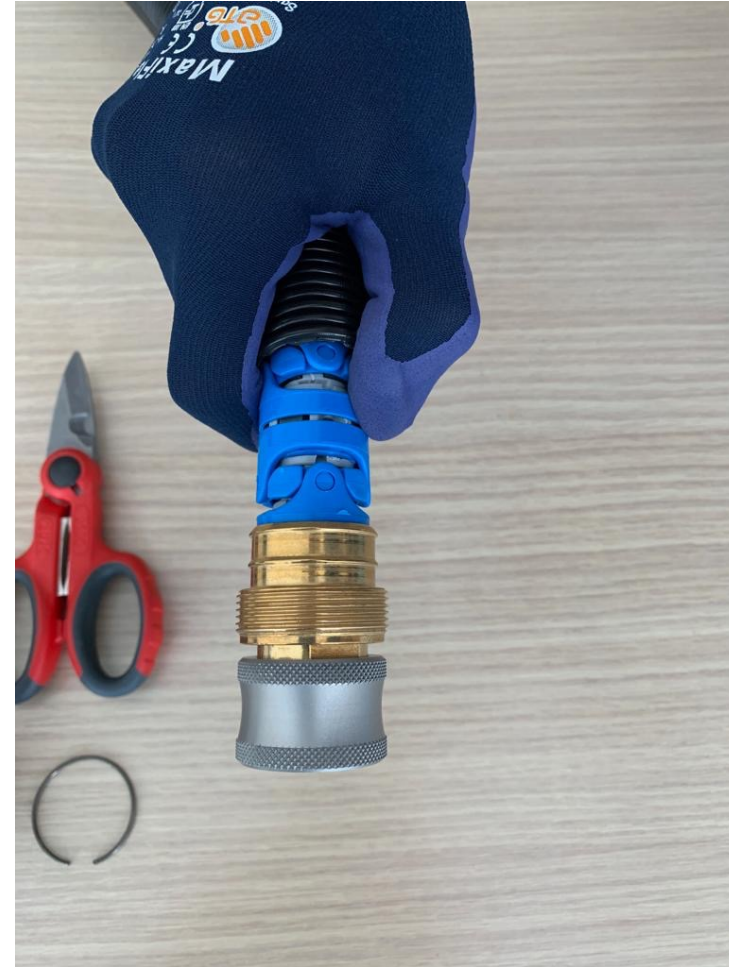

**Remove the quick connector cap**



## Maxiglide PA12 Quick End Connectors: assembly instructions



**Disconnect the inner body and lock the maxi flex with a tiny screw-driver**



## Maxiglide PA12 Quick End Connectors: assembly instructions



**Cut the outer corrugated hose at the desired point or length**



## Maxiglide PA12 Quick End Connectors: assembly instructions



**Pull out the screw driver and firmly hold the maxi flex and hose**



## Maxiglide PA12 Quick End Connectors: assembly instructions



**Shorten the inner maxi flex at the desired point / length**



## Maxiglide PA12 Quick End Connectors: assembly instructions



**Re-connect the quick end connector**






## Maxiglide PA12 Quick End Connectors: assembly instructions



**Push the corrugated hose onto the connector rims, as far as it can go**



## Maxiglide PA12 Quick End Connectors: assembly instructions

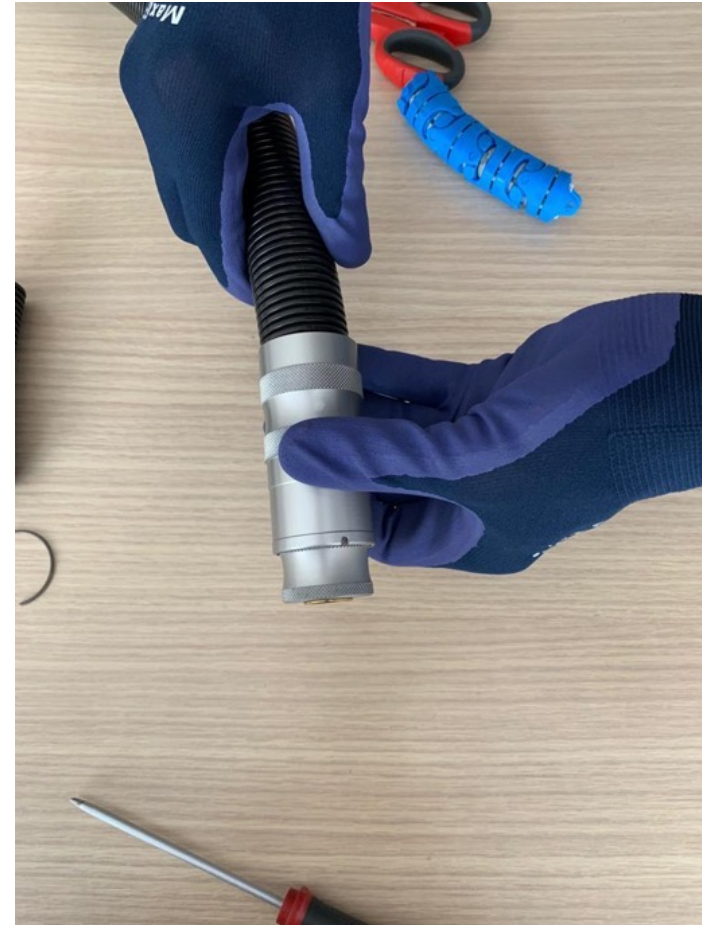

**re-wind the outer connector cap**



## Maxiglide PA12 Quick End Connectors: assembly instructions



**Insert the C shaped locking ring, push it home with a screwdriver, and turn the cap until it locks**



## Maxiglide PA12 Quick End Connectors: assembly instructions

**IMPORTANT: ALWAYS ENSURE THE INNER MAXIGLIDE IS TENSIONED AND SLIGHTLY STRETCHED INSIDE THE OUTER CORRUGATED HOSE**

**AFTER YOU HAVE MOUNTED THE QUICK CONNECTOR AT ONE END, MAINTAIN THE INNER MAXIGLIDE PULLED PRIOR TO CONNECTING THE SECOND QUICK CONNECTOR**

